



MAINTENANCE OPERATIONS STANDARD PRACTICE

Work Order Standard
Operating Practice

INSTRUCTION NUMBER:
75-0015

Creating Corrective Work Orders with Generic Labor Operations

GENERIC LABOR LINE The generic operation labor lines should only be used when no description currently exists in the labor guide for the labor operation you are performing. A **“Request for Review”** form will need to be filled out anytime the generic labor operation is anticipated to be a repetitive. Be sure to select the most applicable generic labor operation from the Labor Guide Operations Menu. Failure to follow these instructions will result in no labor time being given.

WO TYPE: CORRECTIVE

TASK #:

Asset Desc: NATURAL GAS GENERATOR

Model No: NG90

Category: COOLING SYSTEM & BELT

Sub-Category: COOLING SYSTEM & BELT

Labor Operation: Generic Cooling System & Be

Select Labop

- Belt- Replace with guards removed
- Coolant Hose Clamp &/or Tube Clamp-Replace
- Coolant Hoses &/or Tube-Replace
- Coolant Level Sensor - Replace
- Coolant Reservoir- Install - Includes: installation of universal fluid reservoir & applicable parts
- Coolant Sight Glass-Replace
- Coolant Temperature Sensor-Replace
- Coolant Temperature Switch-Replace
- Cooling System Pressure Test
- Diagnose Cooling System Leak
- Diagnose Overheating Condition
- Drain & Refill Cooling System
- Fan (Cooling)-Replace
- Fan Pulley &/or Spacer R&R or R&I
- Generic Cooling System & Belt Drive Labor Line - Specify generic labor operation**
- Guard, Belt- R&R or R&I
- Guard, Fan- R&R or R&I
- Hot start-Install Includes: Fabrication of mounting bracket
- Petcock- R&R or R&I