

How to access the ECU Series 800 controller without the engine running



Step 1: Press down the hour check button


Step 2: Move the OFF/RESET toggle over to the manual position

You should now see the controller screen illuminated and have access to it with the engine not running

How to access the ECU Series 800 controller advanced settings



Step 1: Press the Program/Exit button

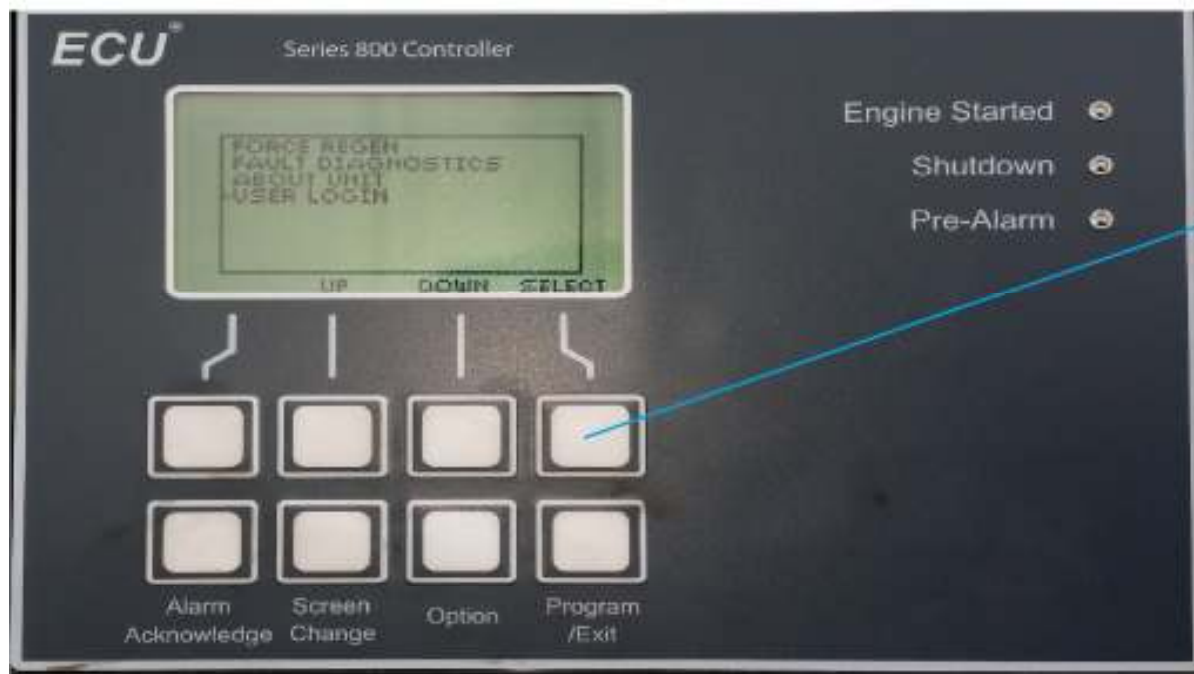


Step 2: Scroll down to USER LOGIN and then press select

Step 3: Press SELECT again



Step 4: Scroll to enter MQ90746 and then press BACK

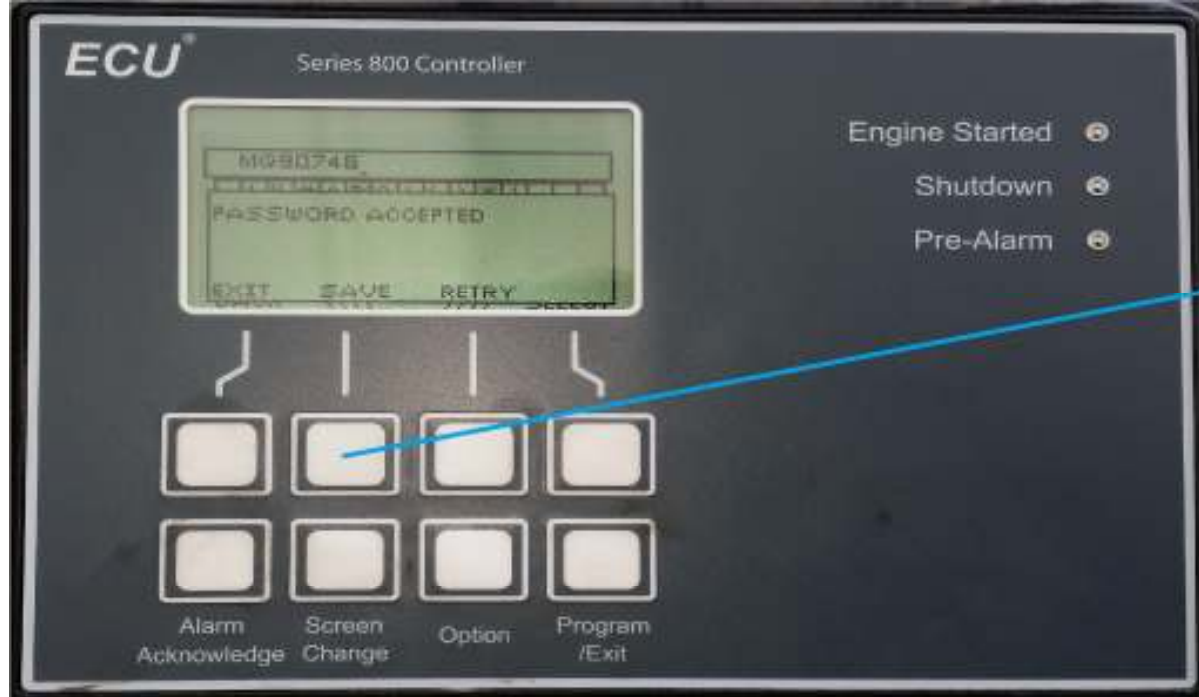


Step 5: Press SAVE


Step 6: Press BACK



This should be the screen you see

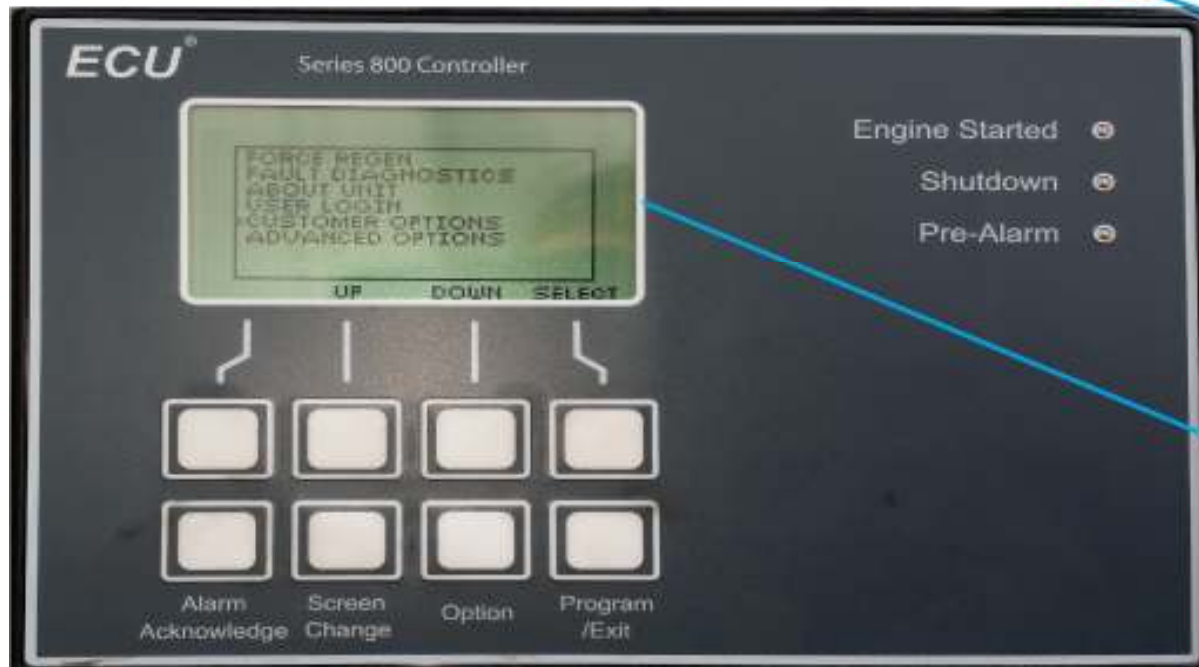

How to change the fuel system settings

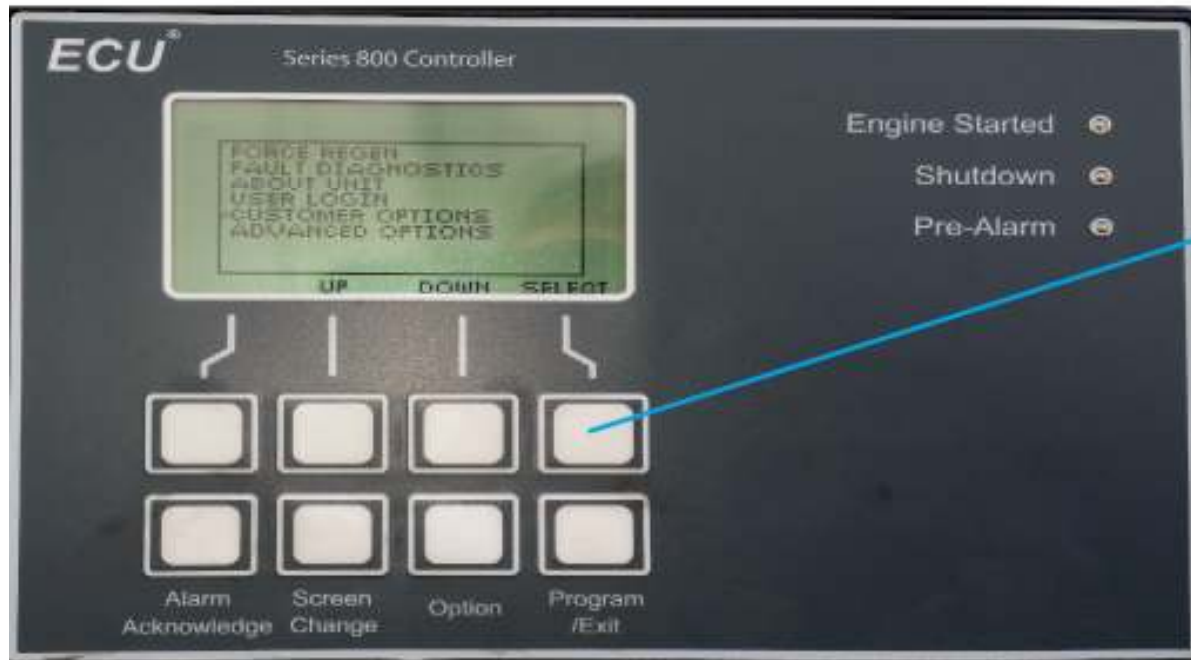


Note: You have to be logged in to do this!

Step 1: Scroll to CUSTOMER OPTIONS and press SELECT



Step 2: Scroll to FUEL SYSTEM SETTINGS and press SELECT

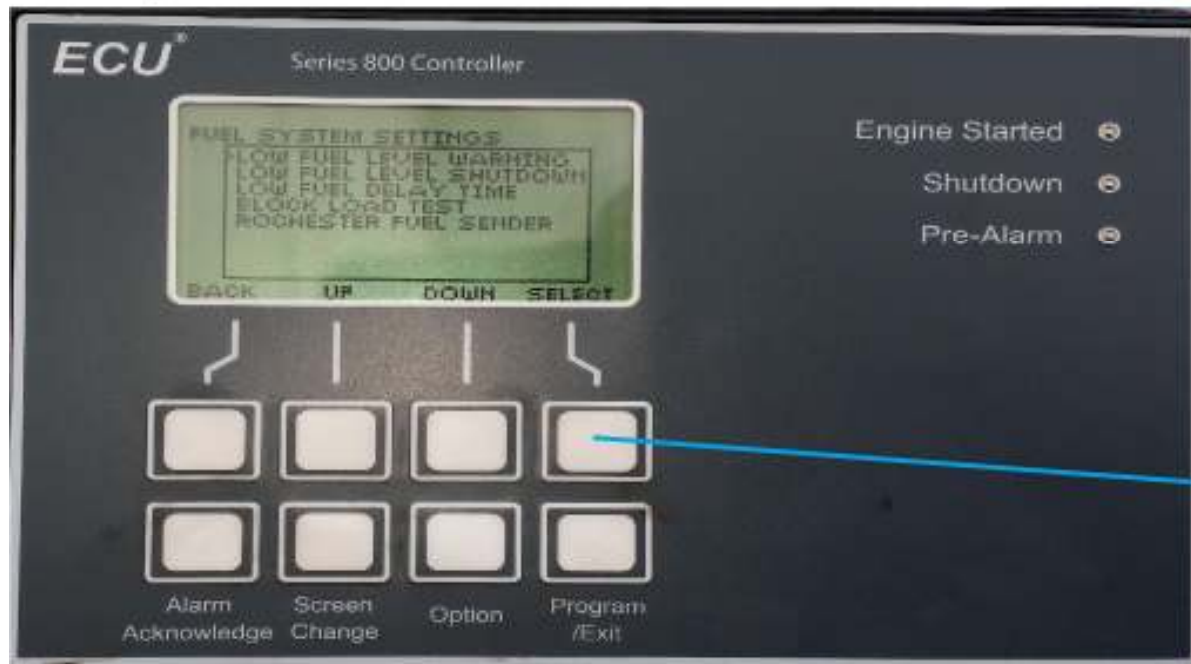

Note: This is a example of how to adjust the low fuel level warning & low fuel level shutdown

Step 3: Scroll to LOW FUEL LEVEL WARNING and press SELECT

How to change the fuel system settings



Step 4: Adjust low fuel level warning to desired percentage by pressing the increase or decrease buttons.

Step 5: Press SAVE

Note: Press the back button and you can repeat the same procedure on all the other settings.

Recommended FUEL LEVEL WARNING is 15% and FUEL LEVEL SHUTDOWN is 10%